

1. Bolt
M8 bolts supplied
2. Pull handle
M8 bolt (1) is screwed into the leg of the pull handle


Note: Bolts may need to be cut to size

Note: *We strongly recommend requesting a sample before committing to any cutting or drilling*

1. Wood fastener
2. Bolt
M8 bolt (1) is screwed into the wood fastener (1)
3. Pull handle
The handle is placed over the exposed bolt head (2)
4. Grub screw
Use the grub screw to securely fix the handle to the bolt head

Note: Bolts may need to be cut to size

Note: We strongly recommend requesting a sample before committing to any cutting or drilling

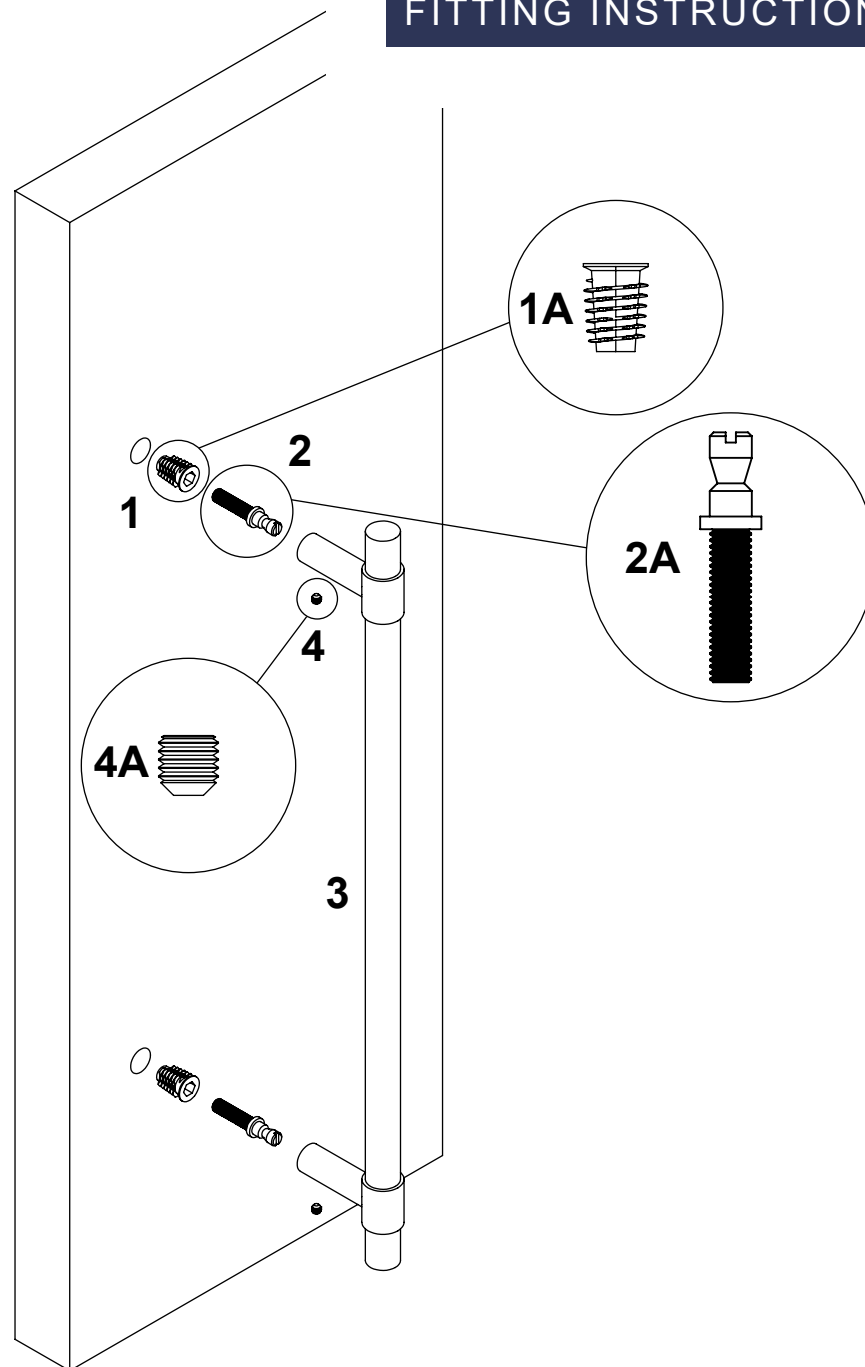

1. Back to back bolt
M8 bolts supplied
2. Pull handle - thread side
M8 bolt (1) is screwed into the leg of the pull handle
3. Pull handle - grub screw side
The handle is placed over the exposed bolt head
4. Grub screw
Use the grub screw to securely fix the handle to the bolt head

Note: Both pull handles are the same and can be used on either the thread side or the grub screw side. Bolts may need to be cut to size

Note: We strongly recommend requesting a sample before committing to any cutting or drilling

